



HOW TO REPLACE A BROKEN SLATE USING A HALLHOOK™

NEW


HOW TO APPLY THE HIDDEN PERMANENT SLATE FIXING

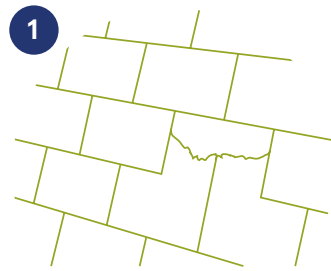


Identify broken slate.

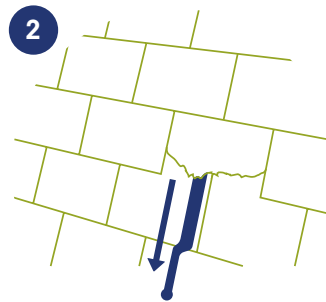


Remove broken slate.

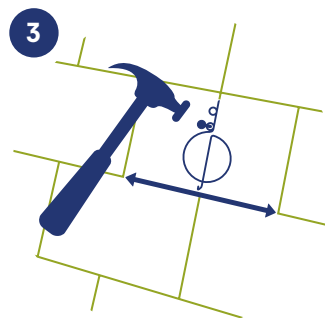


Position **Hallhook™** between slates so that bottom hook is 10mm above finished slate baseline & fix with nail.

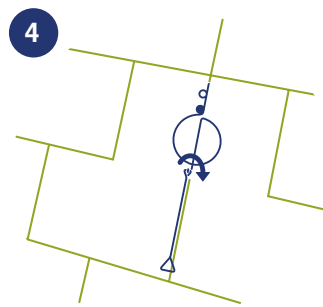

Hang hook pull on hook.

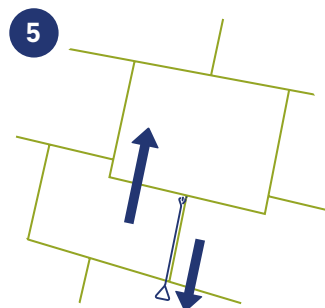


Slide new slate into place. Then gently pull the hook pull until the **Hallhook™** hooks the base of the slate.

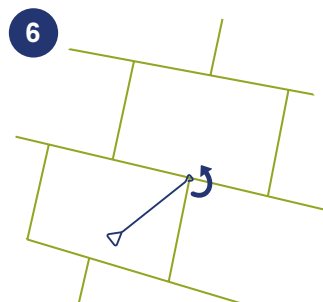

Remove hook pull. **Do not over stretch.**

HOW IT WORKS

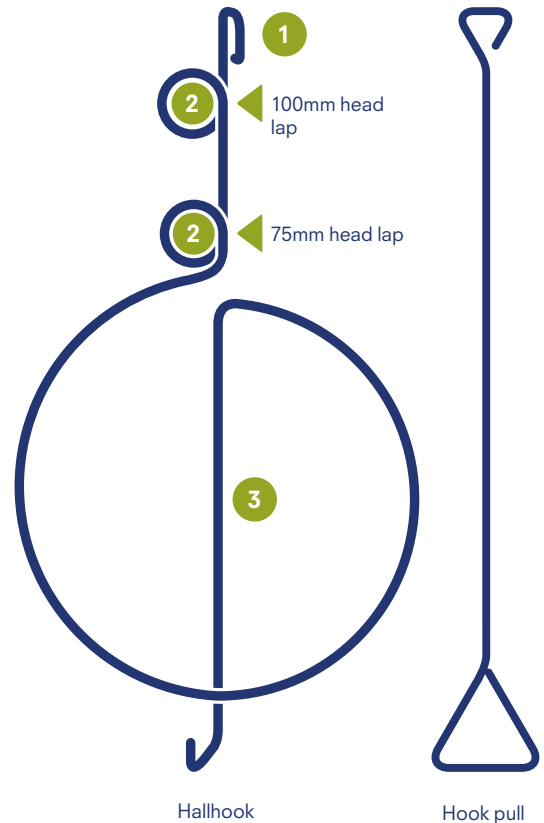

- 1 Fits between slates.

Once a nail fixing is applied at 2 this provides a vertical line to 3 and prevents lateral movement.

- 2 Two nail fixings are available. The nail fixing to use is dependent on the size of the slate head lap.

- 3 Upward biased spring that remains in contact with the underside of the object slate whilst disappearing between the two slates underneath. The underside contact prevents the hook pull slipping off the **Hallhook™**.

A Hallclip® product: GB2473637